

4. CONSEJOS DE UTILIZACIÓN

Si sufre alguna patología especial o si está embarazada, consulte a su médico antes de utilizar "Zen Feet".

Le recomendamos que utilice "Zen Feet" con los pies descalzos.

1. Para mayor comodidad, podrá inclinar el aparato. Para ello, bastará con desenroscar los pies de la parte posterior de su aparato previstos a estos efectos. Podrá elegir entre 5 niveles de inclinación ajustables.

Consejo: los dos pies regulables del aparato deben posicionarse a la misma altura. Para facilitar el ajuste, los pies quedarán bloqueados con un clic por cada vuelta completa.

2. Enchufe el aparato a la red eléctrica utilizando su cable de alimentación.

3. Siéntese cómodamente.

Para colocar los pies correctamente en el aparato: apoye el talón en la zona de vibraciones (5) y los dedos en la zona de relajación específica.

Podrá mover sus pies para recibir un masaje de reflexología en toda la cara plantar (talón, arco, dedos).

4. Elija el tipo de masaje que desee recibir pulsando la tecla de control de su elección.



MASAJE POR VIBRACIÓN
control le permite pasar de la parada al nivel 1.



MASAJE DE REFLEXOLOGÍA
control le permite mover los pies a la posición de masaje.

Observación: Con "Zen Feet", tiene la posibilidad de combinar los dos tipos de masaje al mismo tiempo.

5. Después del uso, desconecte las dos.

5. MANTENIMIENTO

Limpie el aparato con un paño húmedo. No introduzca el aparato en agua.

6. RESOLUCIÓN DE PROBLEMAS

- El aparato se mueve: asegúrese de que esté en contacto con el servicio posventa.
- El aparato no es estable: asegúrese de que el cable de alimentación esté bien conectado.

7. ¡ PARTICIPE EN LA CONSERVACIÓN

Su electrodoméstico contiene materiales que, al final de su vida útil, en un Centro de Recogida Selectiva de Residuos de Aparatos Eléctricos y Electrónicos (RAEE) donde será tratado de forma adecuada.

Fig. 1

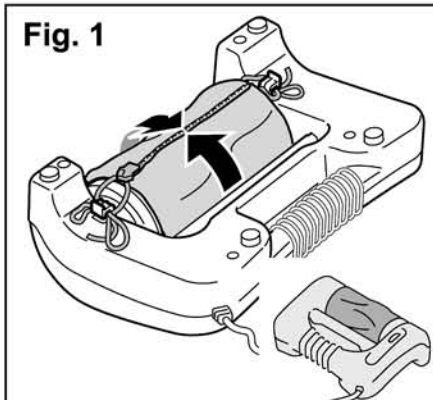


Fig. 2

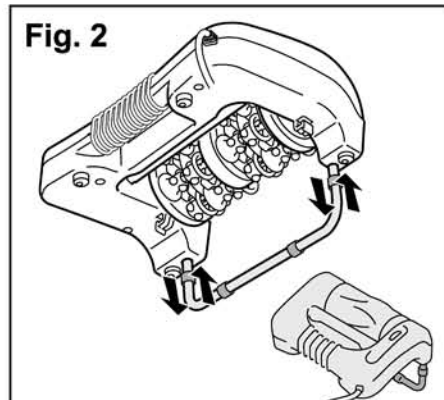


Fig. 3

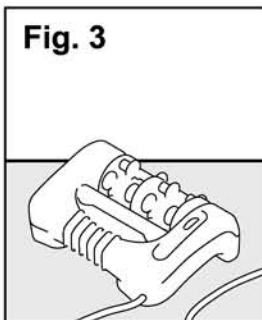


Fig. 4

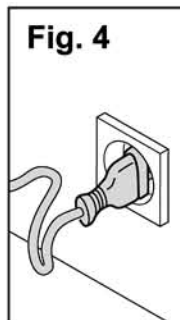


Fig. 5

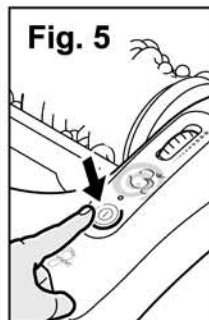


Fig. 6



Fig. 7

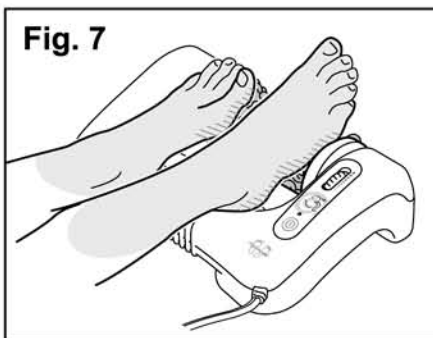


Fig. 8

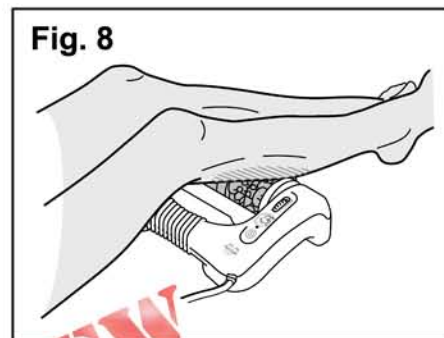


Fig. 9


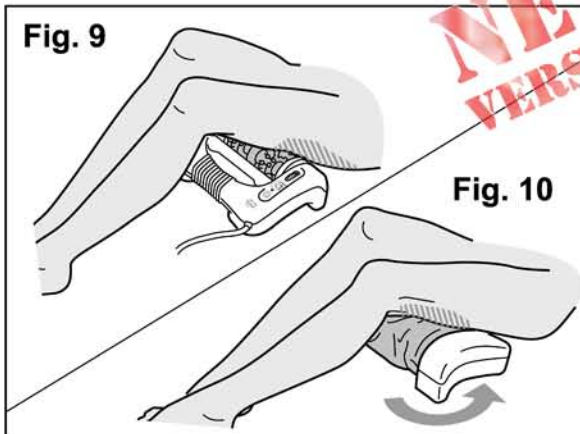


Fig. 10

Fig. 11

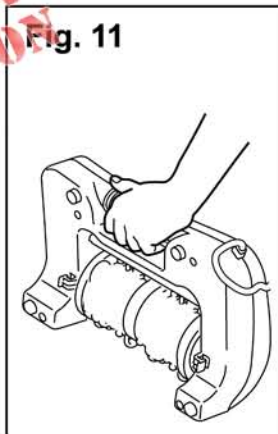

Description

Your rechargeable COOKIE warmer has been designed for the following applications

- to regulate the body temperature of babies and young children;
- for other wellness purposes for adults and old children


The appliance does not require any liquids. The integrated heating element warms the cookie.

The cookie has comfortable finish and is wrapped in the pouch or hours, depending on the use of a towel, the use of a blanket or duvet. The appliance comes with a standard pouch.

The appliance is not to be used for warming animals.

The appliance is suitable for domestic use only.

1. Cookie
2. Charging connector
3. Power indicator
4. Pouch

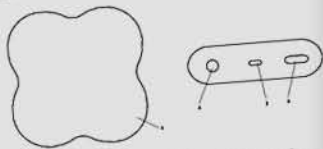

Initial use

- Clean the COOKIE. Refer to the section "Cleaning and maintenance".
- Clean the pouch. Refer to the section "Cleaning and maintenance".

Use

Charging the appliance:

The appliance must be charged for approximately 5 minutes. The appliance can hold the temperature to 50 degrees around 90-120 minutes. And the warmer surface will drop to room temperature around 6-8 hours.

Before you proceed, we need you to pay attention to the following:

- Do not use the charging connection for other purposes than charging.
- Do not move the appliance during the charging process.
- Do not leave the appliance unattended when the appliance is connected to the mains. Only charge the appliance in a room with good ventilation.

- Place the COOKIE on a stable and flat surface.

- Connect the COOKIE with the charging connector and insert it into the power socket. The power indicator comes on. The charging process starts.

If the temperature reaches the Maximum temperature, The indicator light stops automatically.

Note: The COOKIE will not feel warm directly after the charging process is complete. The maximum temperature will only be reached if the pouch is used.

Note: if the COOKIE is still warm, the charging process will stop and the indicator goes off.

*Remove the mains plug of the charging connector from the power socket.

Hints for use

The appliance is suitable for the following applications:

- to regulate the body temperature of babies and young children;
- for other wellness purposes for adults and older children

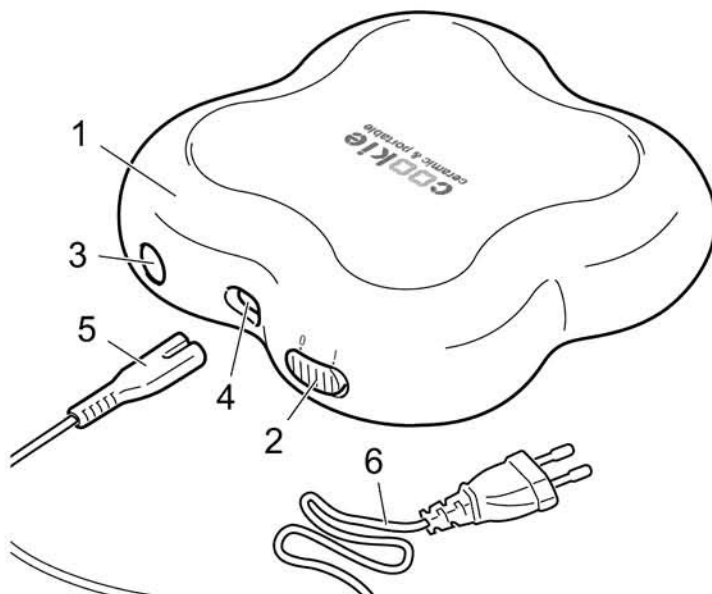


Fig.1



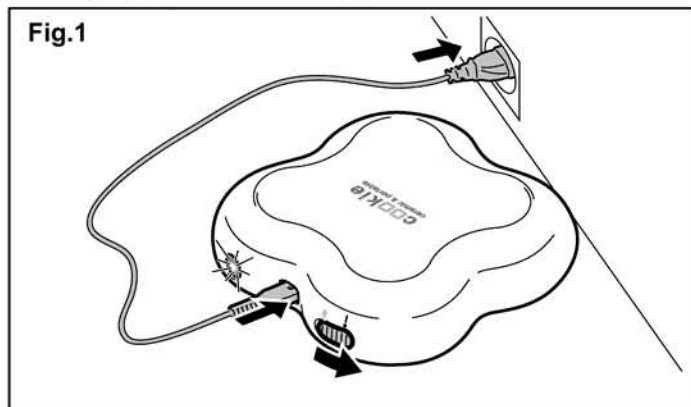


Fig.2

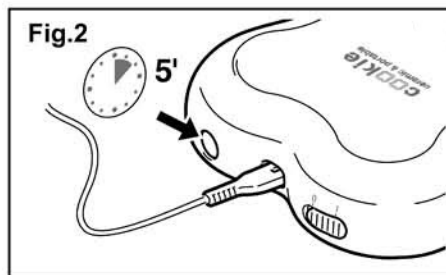

**NEW
VERSION**

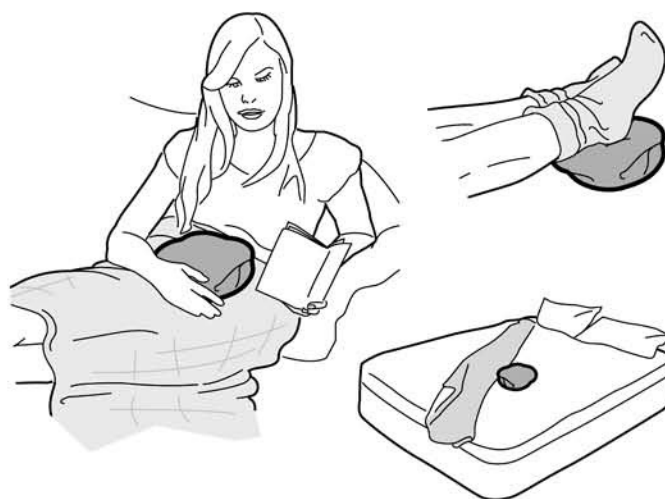

Press the release button and pull the dust container out. Empty the container. If you have a new one, refit the filter in the dust container. If damaged, replace it with a new one. Then refit the dust container and place the cleaner on the surface. Wipe the outside of the cleaner with a dry cloth. Do not use any cleaning solution and this will damage the unit.

Dust container (Dirty/Liquid)

Setting up the vacuum

1. Install wall Bracket (see below-Wall Bracket Fitting Instructions).

PREVIOUS
VERSION



- 1) Drill two holes 64mm 2) Insert the bolts 3) Hitch the Vacuum onto the Wall Bracket. Make sure Recharging Sheets of the Vacuum are connected.
3. Plug in the charger. The pilot light will illuminate charged. it is recommend to charge the vacuum cleaner please charge the vacuum cleaner for 16 hours.
4. A fully charged battery-pack will give approximately charging will get warm while charging.

Mounting the wall bracket

1. Before drilling any holes ensure that their position is correct.
2. Ensure the wall is sound and support the vacuum force involved when inserting and removing the vacuum.
3. Choose a mounting location away from heat and damage.
4. There should be at least 300mm of free space above storage and removal of vacuum cleaner.

Storage /Charging Location:

1. Extreme weather (too hot or too cold) is dangerous battery in temperatures above 37 C or below 0 C.
2. Keep away from heat sources. Garages, workshops places for the vacuum.
3. Do not store the vacuum in areas with high temperature underneath direct hot sunshine.

Operate:

1. Lift and remove the vacuum from the bracket and the vacuum cleaner will start to work.
2. The vacuum cleaner will be switched off when you stop.
3. To pick up the solids vacuum in any direction until you stop.
4. If you like, you may use the crevice tool ,upholstery tool.
5. Empty the container before doing any more vacuuming.
6. Replace the cleaner on the bracket ,the pilot light will be charged.

Cleaning the filter

The dust container should be emptied and cleaned. To clean the dust container, Hold the vacuum cleaner down.

Press the release button and pull the dust container out. Empty the container. If you like, you may wash the filter with water.

Refit the filter into the dust container.

If damaged, replace it with a new one.

Then refit the dust container and place the cleaner on the bracket.

Wipe the outside of the cleaner with a dry cloth.

solution and they will damage the unit.

Fig. 1

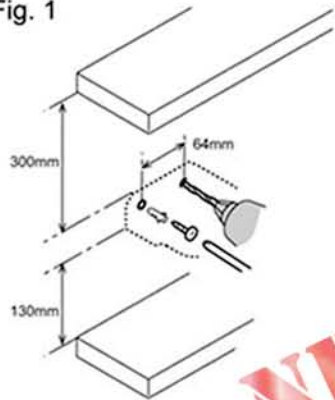


Fig. 2



Fig. 3



Fig. 4



Fig. 5

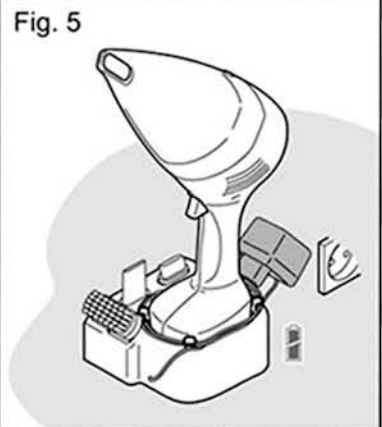


Fig. 6

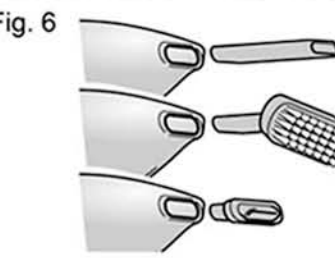


Fig. 7

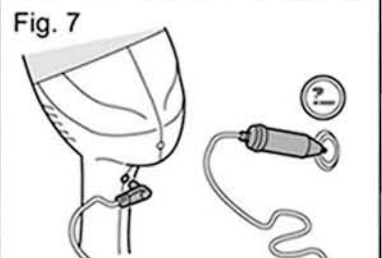


Fig. 8

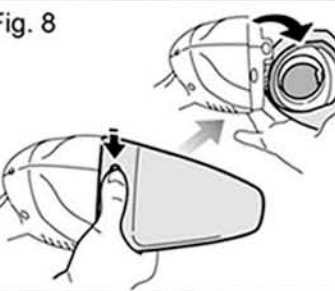


Fig. 9

