



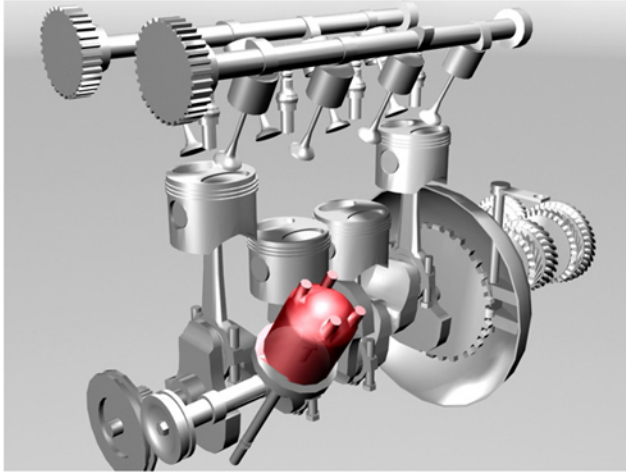

PILLION HANDLE

Install the pillion handle using bracket.

- A: Pillion handle
- B: Bolt

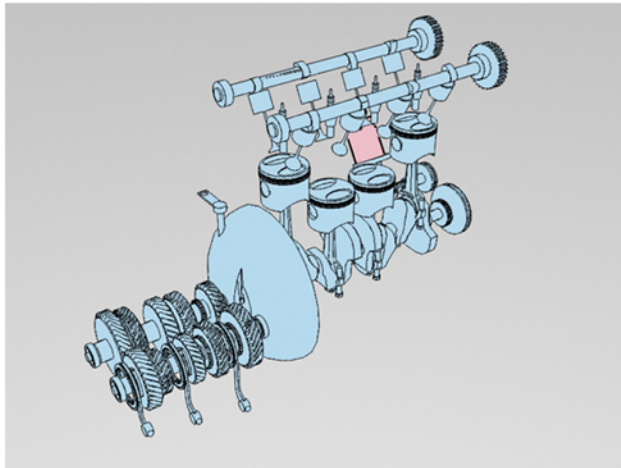

HANDLEBAR


Install the handlebar assembly and the four allen bolts.

NOTE:

The punch mark on the
Align the dot mark on the
mating surface of the front

- A: Clamp
- B: 8 × 30 mm allen bolt
- C: Plastic cap OD:11.0 mm
- D: Dot mark
- E: Punch mark

Tighten the handlebar clamp torque.

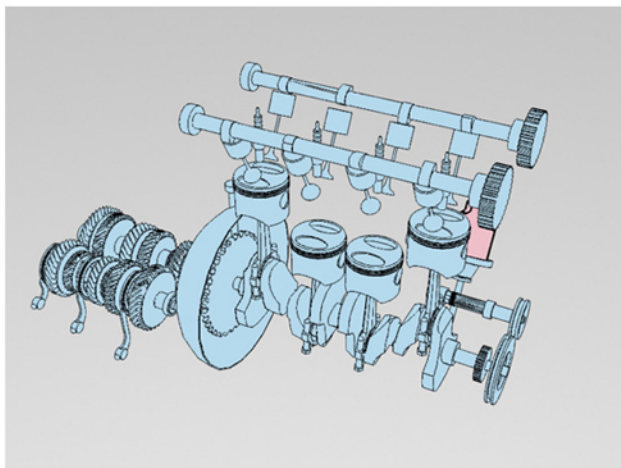

NOTE: To install the handlebar, tighten the bolt (A) of the front side and then tighten the rear side.

CAUTION


Make sure that the clamp is aligned on the front side as shown in the diagram.



Handlebar clamp bolt:

After installing the handlebar, tighten the bolt on the head of each bolt.


- A: 8 × 30 mm allen bolt
- B: 8 × 30 mm allen bolt
- C: Plastic cap OD:11.0 mm
- D: Punch mark

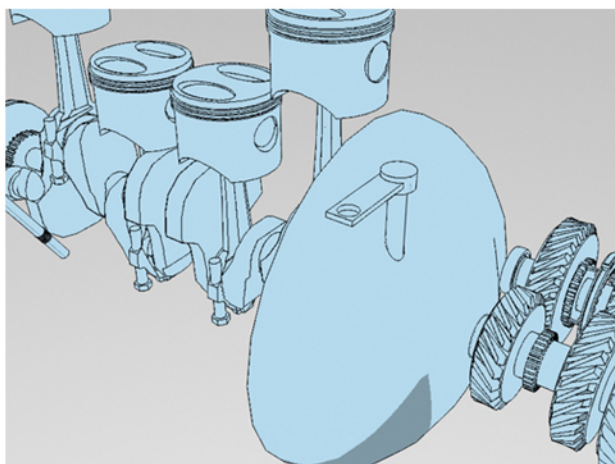

⚠ WARNING

The line drawings on page 10 show the proper routing of the control cables and wirings. Refer to them in the instructions carefully.

- A: Front brake hose
- B: Throttle cable
- C: Right switch wiring harness
- D: Clutch cable
- E: Choke cable
- F: Left switch wiring harness

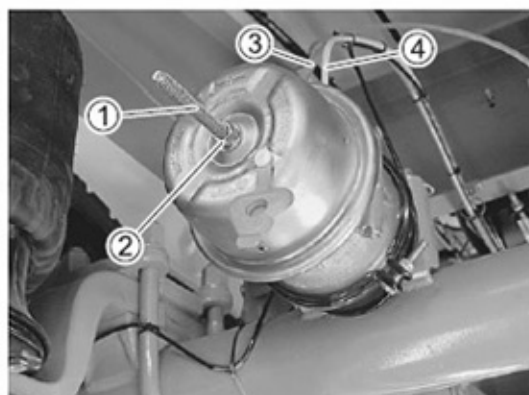


Útil colocado

- 1 Útil de desbloqueo
 - 2 Tuerca
 - 3 Latiguillo neumático de señal de freno (azul)
 - 4 Latiguillo neumático de suministro continuo de aire (amarillo)
- 3 Colocar la tuerca ② en el útil ① y girar la tuerca en sentido horario para hacer retroceder, enganchado al útil, el resorte de seguridad del interior del dispositivo.
- 4 Se considera que la tuerca se debe girar hasta que el útil retroceda aproximadamente 4 cm o la tuerca quede bloqueada.

Tras realizar esta operación de emergencia llevar el semirremolque al taller más cercano.

Desbloqueo de una punta de freno de disco

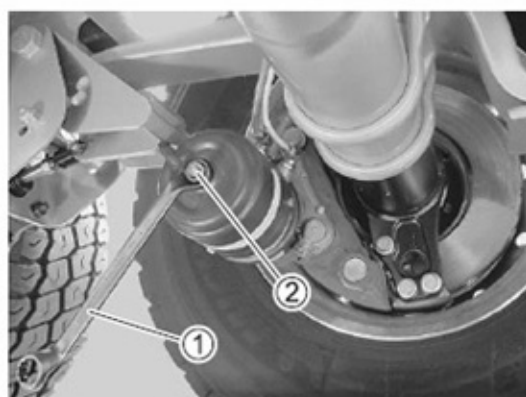

Actuador neumático de accionamiento de frenos de disco

- 1 Llave para el desbloqueo
 - 2 Cabeza del tornillo de desbloqueo
- 1 Con llave apropiada ① girar a izquierdas la cabeza del tornillo de desbloqueo ②.

Se produce la salida del tornillo, que al estar sujeto al resorte de seguridad del actuador, desbloquea el dispositivo.

DESCRIPCIÓN DEL PROCEDIMIENTO

Acción Preventiva

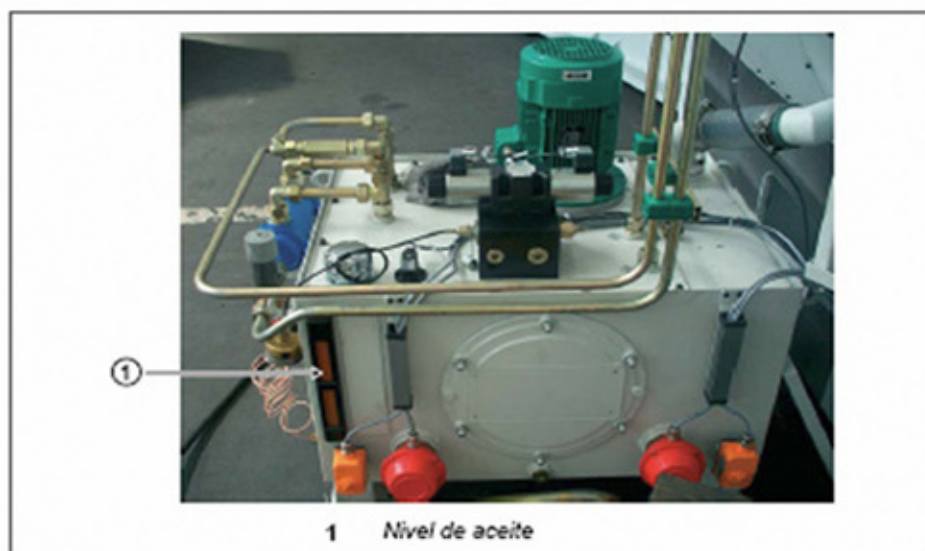


Fig. 1

Ubicación del indicador del nivel de aceite del depósito de lubricación

